

INSTRUCTIONS FOR CONVERTING A DROPSIDE CRIB INTO A STATIONARY CRIB FOR 401, 402, 3510, 4510, 5510 ROMINA FURNITURE DROPSIDE CRIBS

BOX CONTENT

- end panel drilling pattern **(#1)** - 1 pcs. (specific to each crib type)
- wood drill **(#2)** - 1 pcs. (same for each crib type)
- set of 2 wooden rectangular pieces for adjusting the depth of drilling **(#3 & #4)** - 1 set (specific to the drill sent in this box)
- Allen wrench - 1 pcs.
- threaded metallic insert - 4 pcs. (same for each crib type)
- Allen bolt 50mm or 1 31/32" - 4 pcs. (same for each crib type)
- metallic inserts mounting tool (one 70mm Allen bolt with two factory mounted metallic inserts) - 1 pcs.

STEP 1

Completely disassemble your dropside crib by following in reverse order the steps described in your assembly manual. If you don't have your assembly manual anymore, you can download a copy from the "Assembly manuals" section of our website www.rominakidsfurniture.com.

STEP 2

Using a Phillips screwdriver (not supplied) you must completely remove all the factory mounted hardware involved in dropside moving, found on the end panels of your crib. You must remove:

- 2 metallic pins (from both end panels);
- 2 white plastic pins (from both end panels).

Remember: the resulted hardware is not a toy!

You must keep this hardware in a proper place, away from your children.

STEP 3

Adjust the depth of drilling by using the **(#3)** & **(#4)** wooden pieces, the wood drill and a drilling machine. Take the drill and insert it up to the bottom of the hole of **(#3)** wooden piece then add the **(#4)** wooden piece. The remaining part of the drill must be completely inserted and well fixed into the drilling machine head. Remove the **(#3)** & **(#4)** wooden pieces. See pictures **3.1** to **3.8** for details.

STEP 4

Take the end panel drilling pattern **(#1)** and place it onto one of the end panels of your crib as they resulted after completing **STEP 2**.

The correct position of the end panel drilling pattern **(#1)** is achieved when both **A** & **B** conditions are fulfilled and the arrow on the pattern is facing upwards (see pictures **401** to **5510** for details) :

A) the inner surfaces of the end panel drilling pattern must touch both innermost surfaces of the corresponding crib corner post involved in dropside fixing;

B) the upper surface of the drilling pattern must touch the lower surface of the upper horizontal piece of the crib end panel (the upper piece of the crib corner component for **4510**)

Hold firmly the end panel drilling pattern **(#1)** in the correct position and mark the position of the hole with the drill (see picture **4.1** for details). Do the same for the other crib end panel.

- for **4510** and **5510** cribs you need to mark one hole for each of the two corner posts involved in dropside fixing;
- for **401**, **402** and **3510** cribs you need to mark two holes for each of the two corner posts involved in dropside fixing.

Remove the end panel drilling pattern **(#1)** and attach the wooden rectangular piece **(#4)** to the drill (see picture **4.2** for details).

Position the drill over the previous marked position, normal to the crib's corner post surface, hold the rectangular piece with one hand and drill a hole until the wooden piece touches the crib's corner post surface (see picture **4.2** for details).

Do the same for the other crib end panel.



STEP 5

Take the metallic inserts mounting tool and attach one threaded metallic insert onto it. Then, using the Allen wrench, insert the threaded metallic parts into the previous drilled holes (see picture **5** for details).



STEP 6

Using the assembly manual, re-assemble the crib but skip the dropside mounting steps and attach the supplied stationary-side following its mounting steps and using the four Allen bolts supplied now.


Be sure to strictly follow all the assembly instructions regarding bolts tightening!

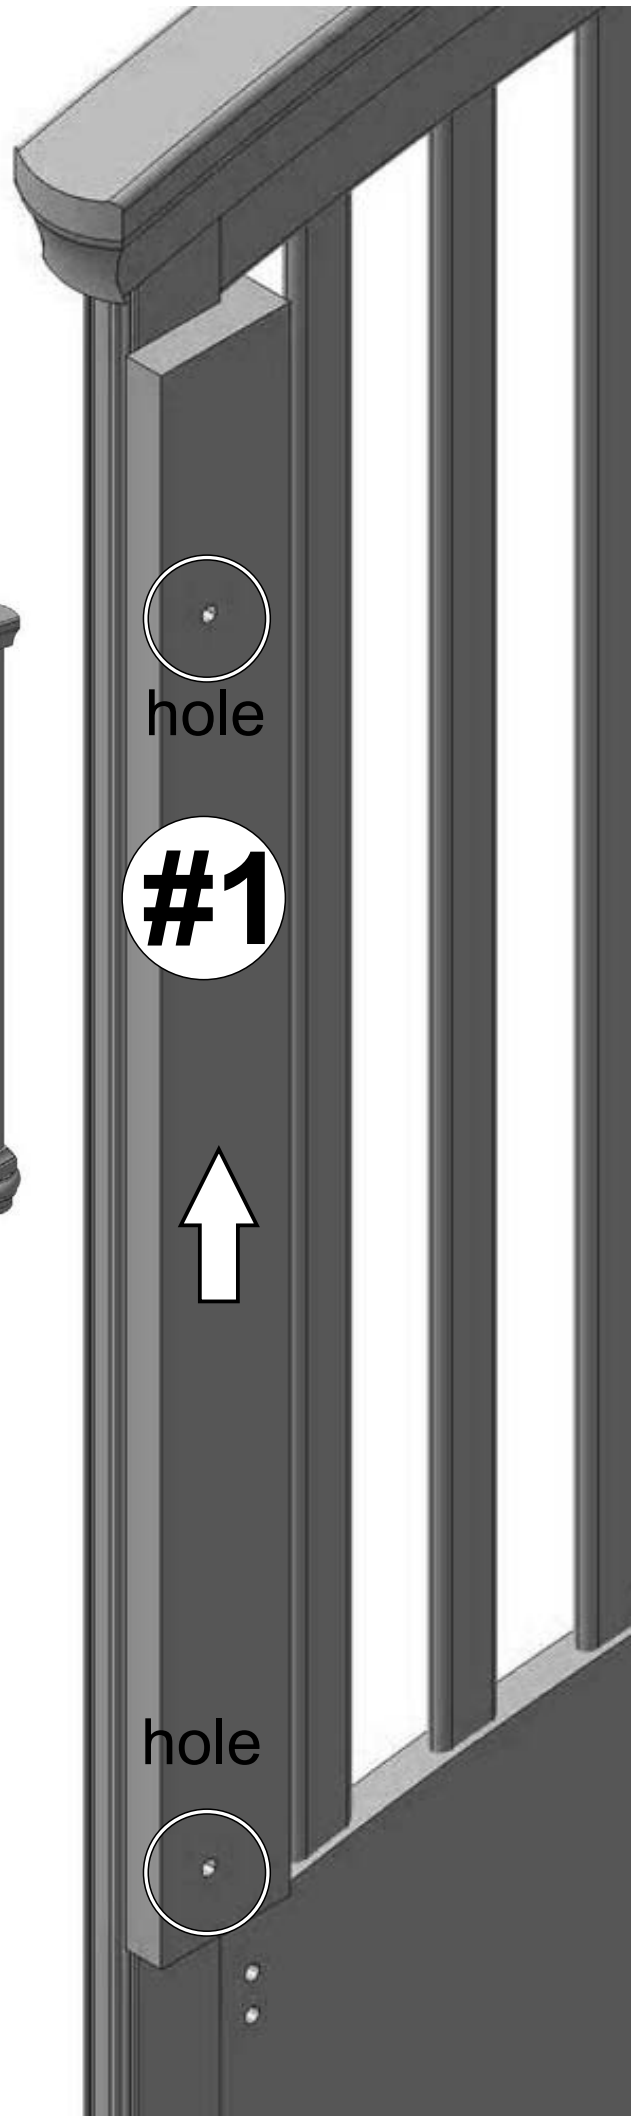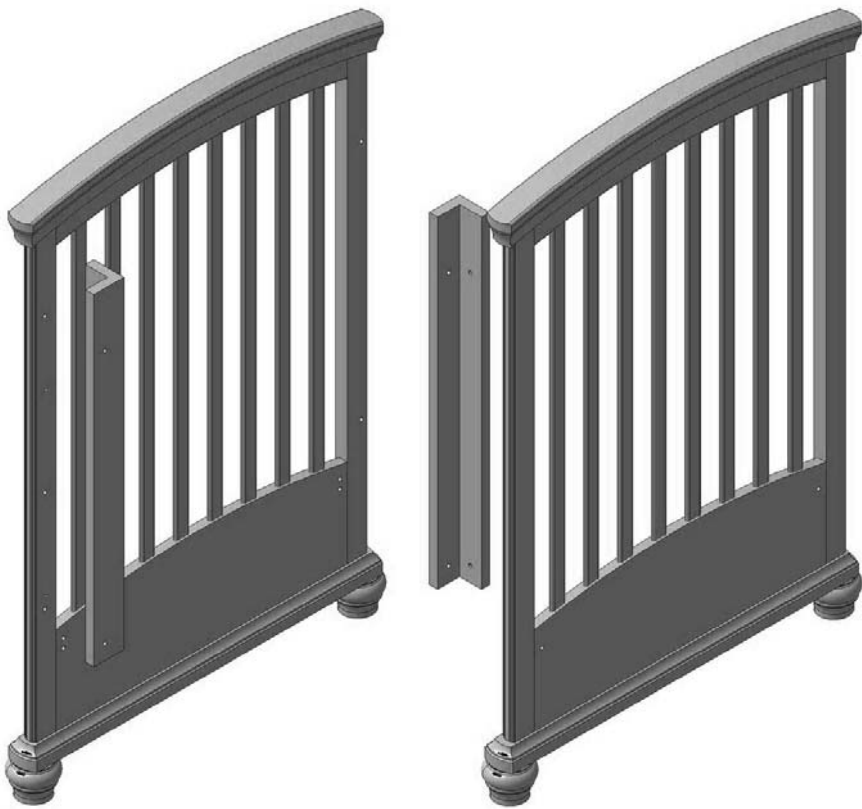


401

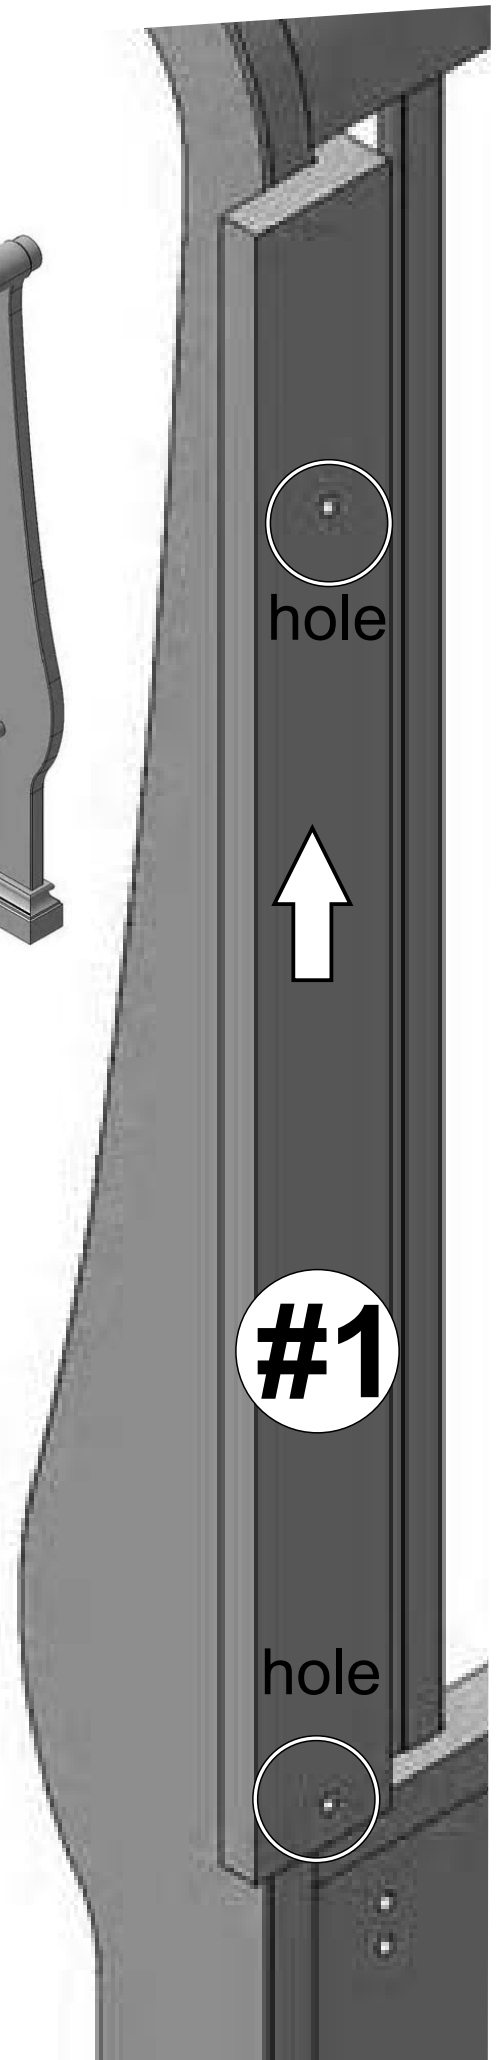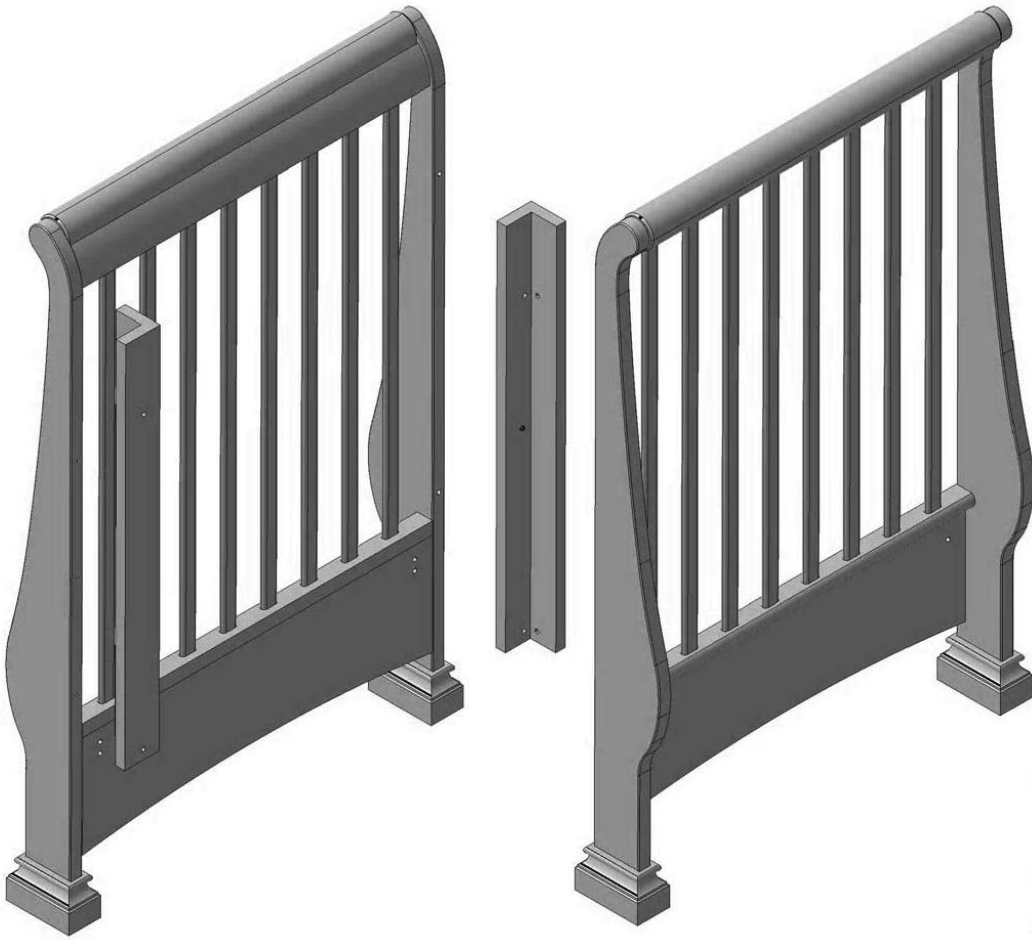



402

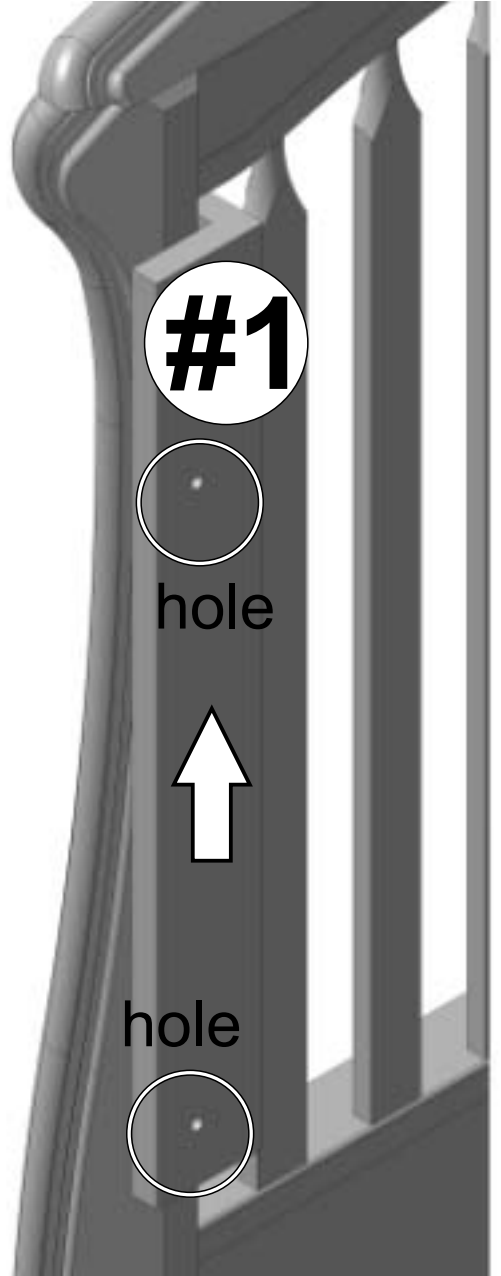



3510



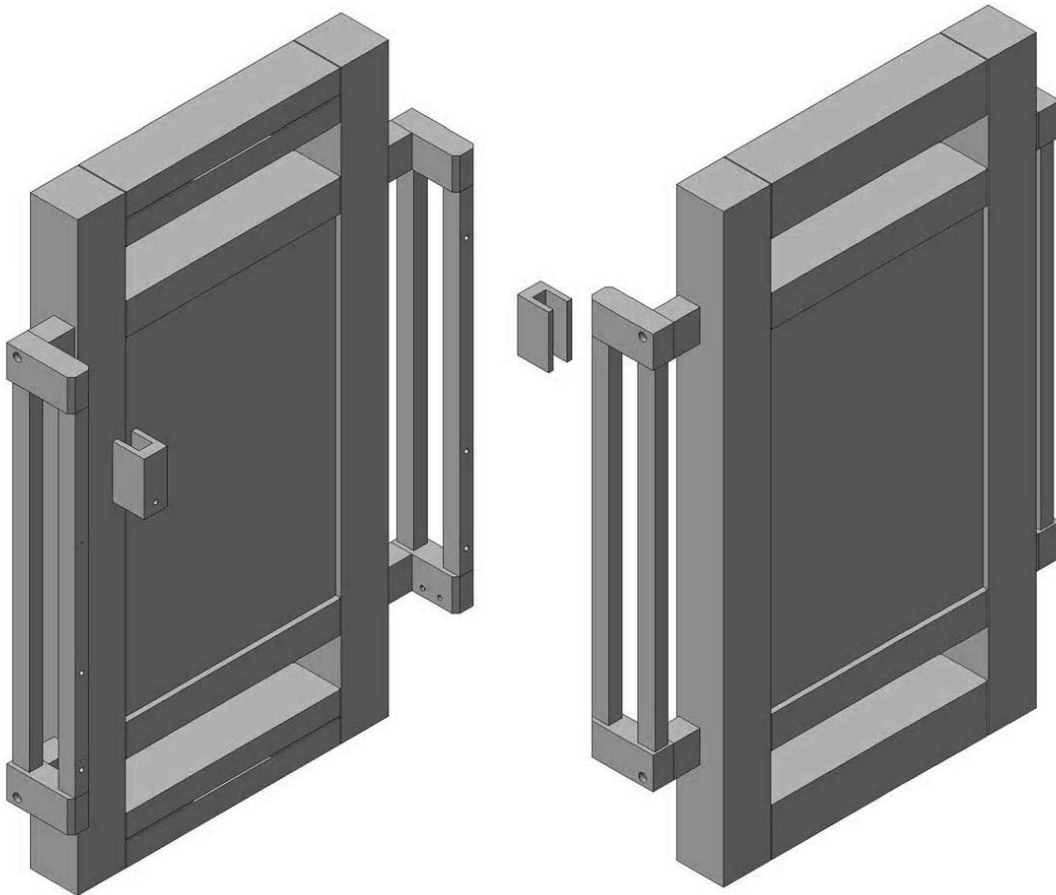


4510

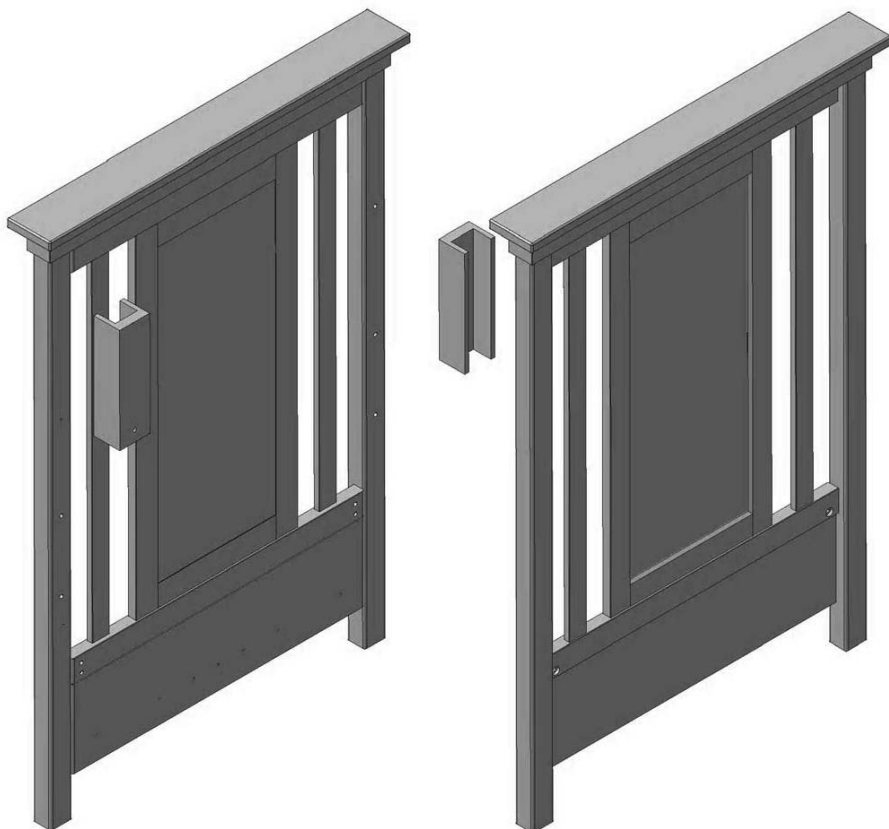
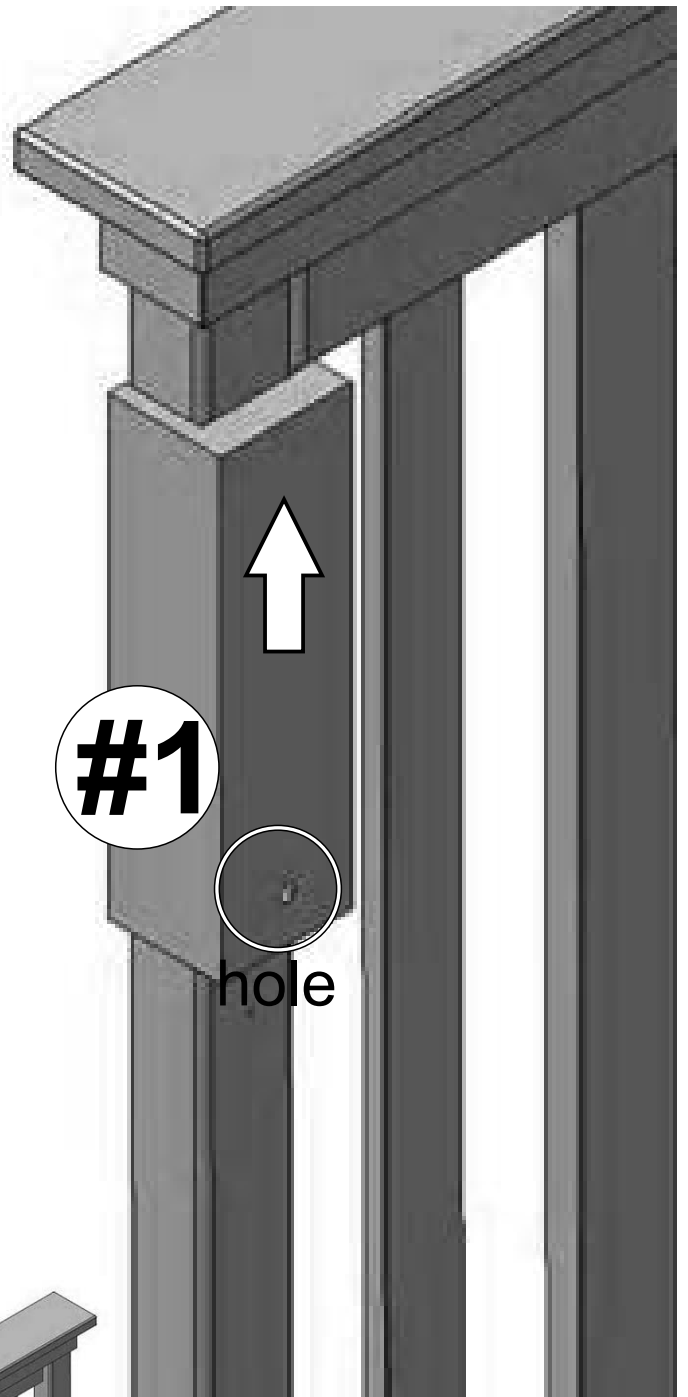


5510

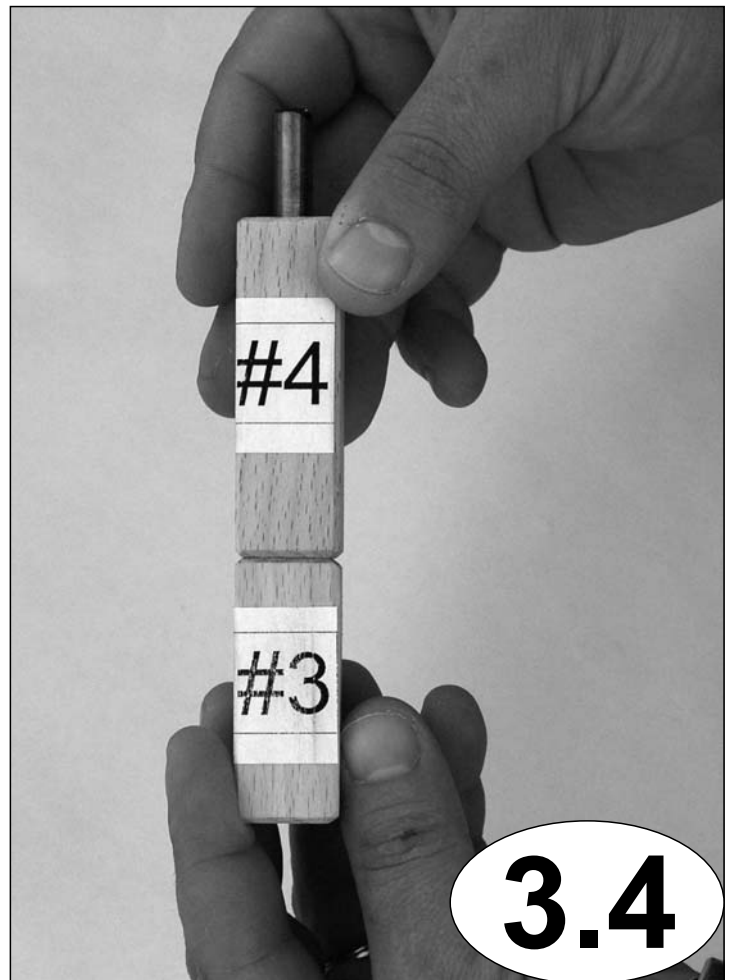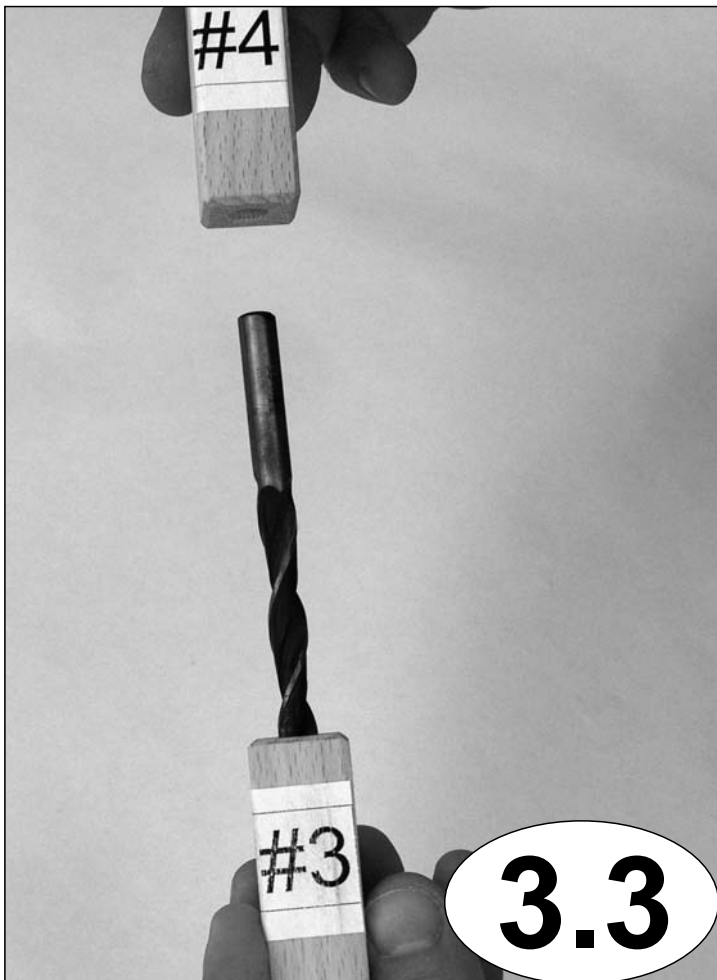

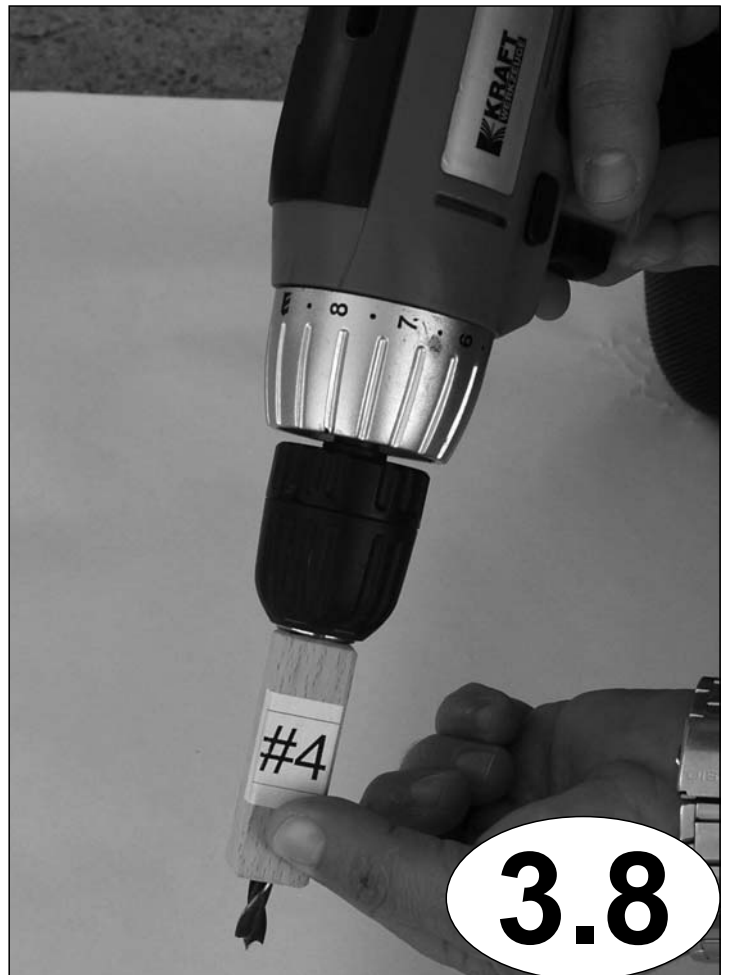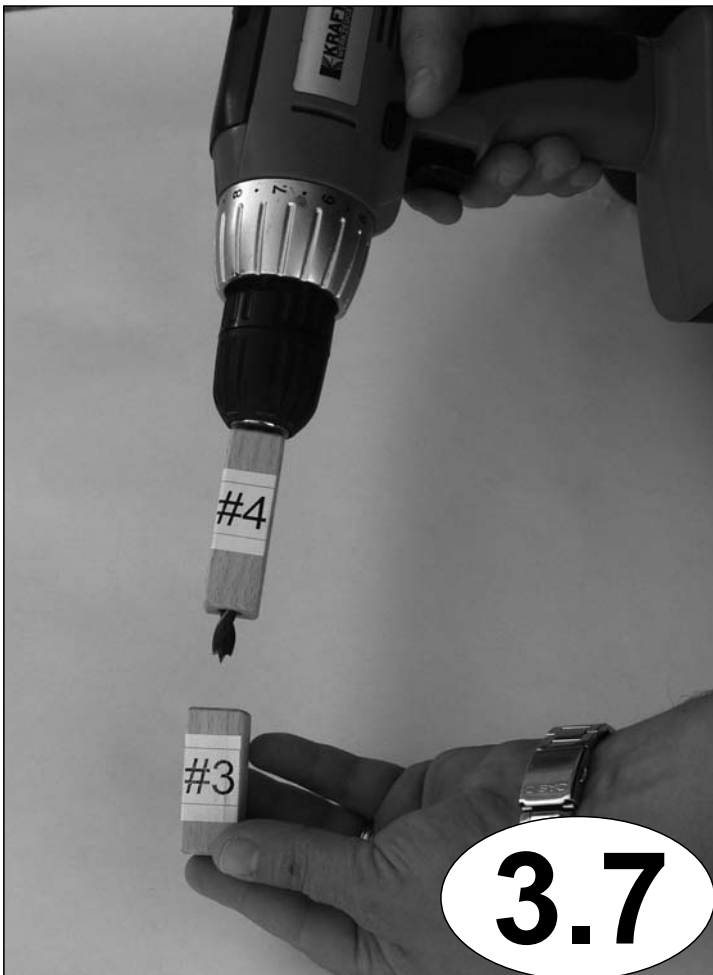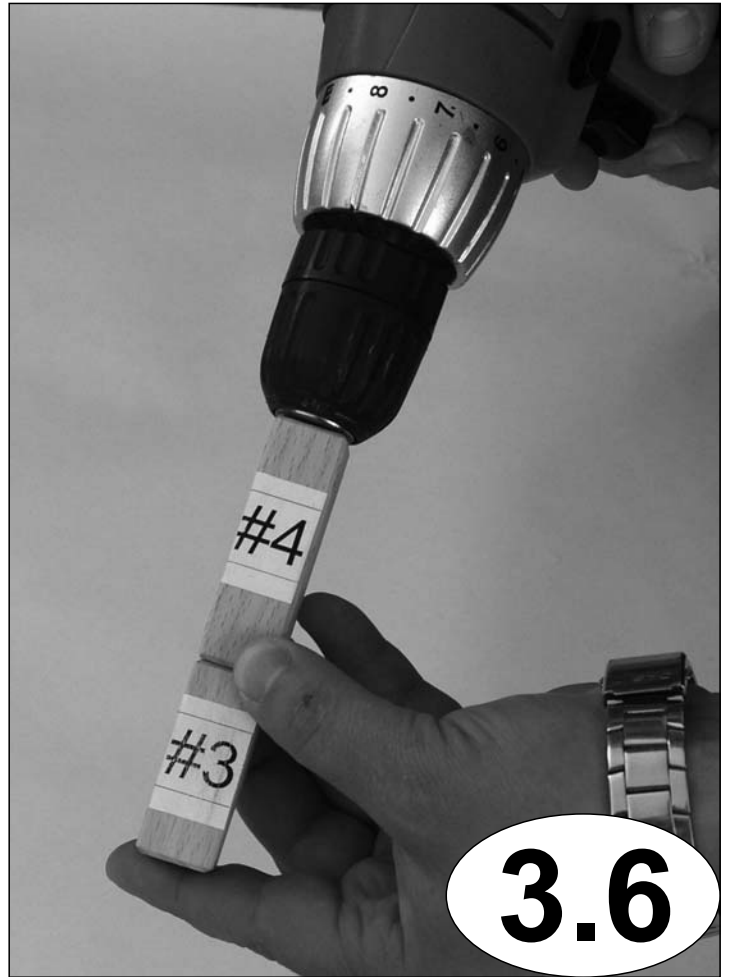



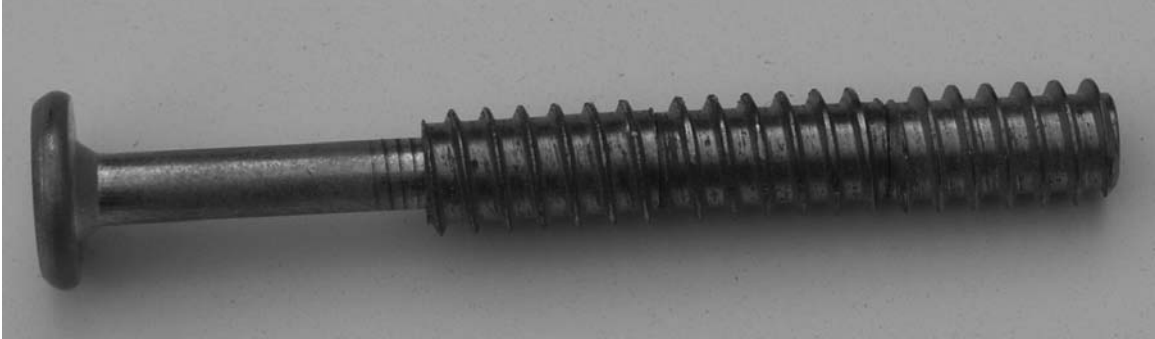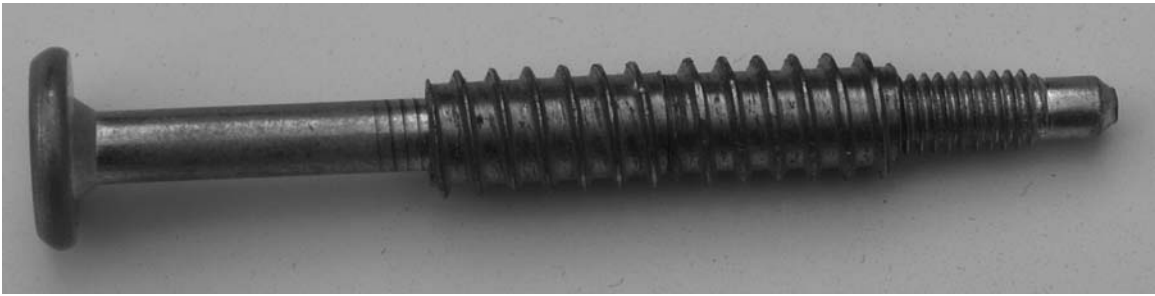

5

Regular cleaning with mild soap on a soft cloth, followed by a clean damp cloth, then a dry cloth, will preserve the original luster and beauty of this fine finish of your Romina Furniture product.



Thank you for being one of our distinguished clients.

Romina®
Furniture *Team*

Visit

www.rominakidsfurniture.com
for updates, special offers and more new designs.