


ASSEMBLY INSTRUCTIONS FOR YOUR 4099 ARMOIRE ANTI-TILTING FEATURE

IMPORTANT:
PLEASE, READ ALL INSTRUCTIONS
BEFORE ASSEMBLING!
PLEASE, SAVE INSTRUCTIONS FOR
FUTURE USE

WARNING: THE PROPER FIXING OF YOUR ARMOIRE IS IMPORTANT FOR YOUR BABY'S SAFETY. TO KEEP YOUR BABY SECURE AND SAFE, AND TO AVOID POTENTIAL INJURY OR DEATH, CAREFULLY READ AND FAMILIARIZE YOURSELF WITH ALL WARNINGS, CAUTIONS AND INSTRUCTIONS IN THIS INSTRUCTION BOOKLET. KEEP THIS INSTRUCTION BOOKLET FOR FUTURE USE.

DO NOT THROW THIS INSTRUCTION BOOKLET.

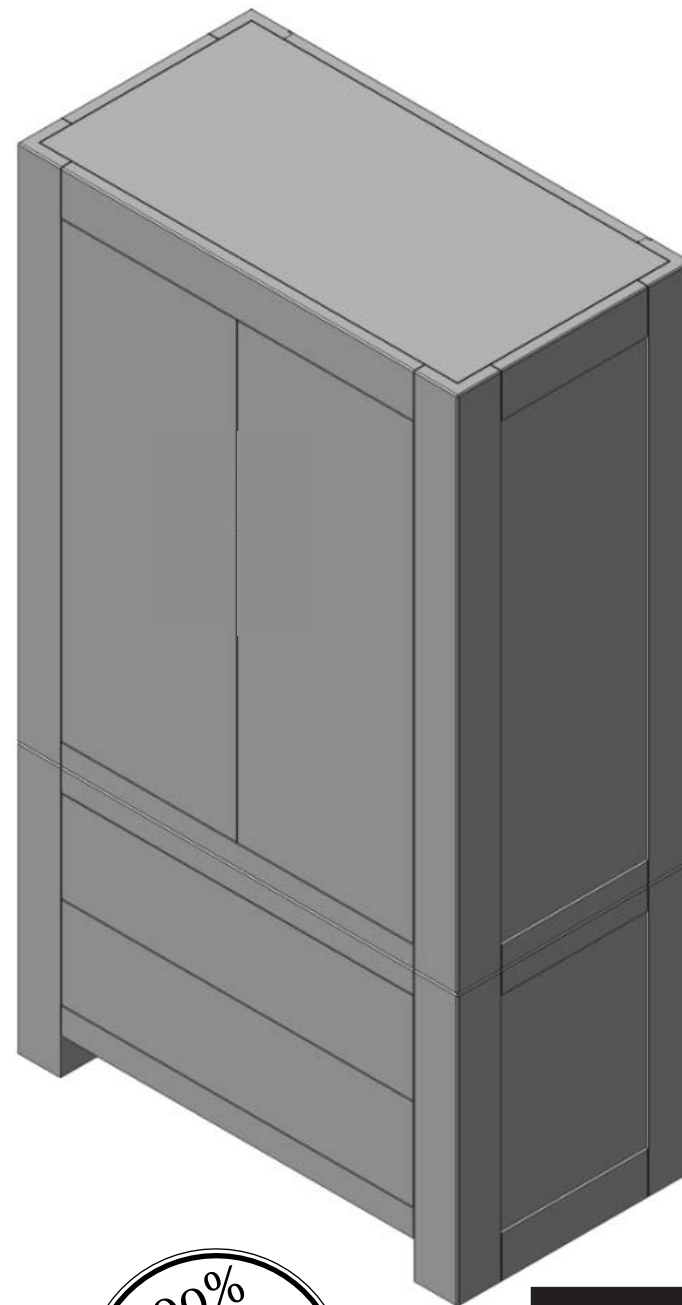

20 Corporation Row, NJ 08817
Phone (718) 478-5100, Fax (718) 478-5117
www.rominafurniture.com

NOTE: THE STYLE OF YOUR ARMOIRE MAY VARY FROM WHAT IS PICTURED IN THE INSTRUCTION SHEET

Please locate and confirm that you have the following parts:

1. metallic bracket = 2 pcs.
2. wood screw (35mm - 1 3/8") = 8 pcs.

Required tools: Phillips screwdriver (not supplied).

CAUTION: Do not use a power screwdriver which can cause screws or wood to break or strip.

CAUTION: The upper body is only intended for use with the lower body of the armoire.


Position the upper body over the lower body. Make sure that the upper body is aligned with the lower body. Attach the metallic brackets to the back side of the upper body and the lower body using the pre-drilled holes. Completely tighten all the eight wood screws.

CAUTION: ALWAYS USE BOTH METALLIC BRACKETS AND ALL THE EIGHT WOOD SCREWS TO FIX THE TWO BODIES OF THE ARMOIRE!

WARNING: TO KEEP YOUR BABY SECURE AND SAFE, AND TO AVOID POTENTIAL INJURY OR DEATH, **IT'S VERY IMPORTANT** TO COMPLETELY TIGHTEN ALL THE 8 WOOD SCREWS LISTED ABOVE.

CAUTION: YOU MUST PLACE THE UPPER BODY ONLY OVER THE LOWER BODY OF THIS ARMOIRE.

WE ASSUME NO RESPONSIBILITY IN CASE OF STRUCTURAL OR OTHERWISE FAILURE CAUSED BY THE POSITIONING OF THE UPPER BODY OVER ANYTHING ELSE THAN THE LOWER BODY OF THIS ARMOIRE.

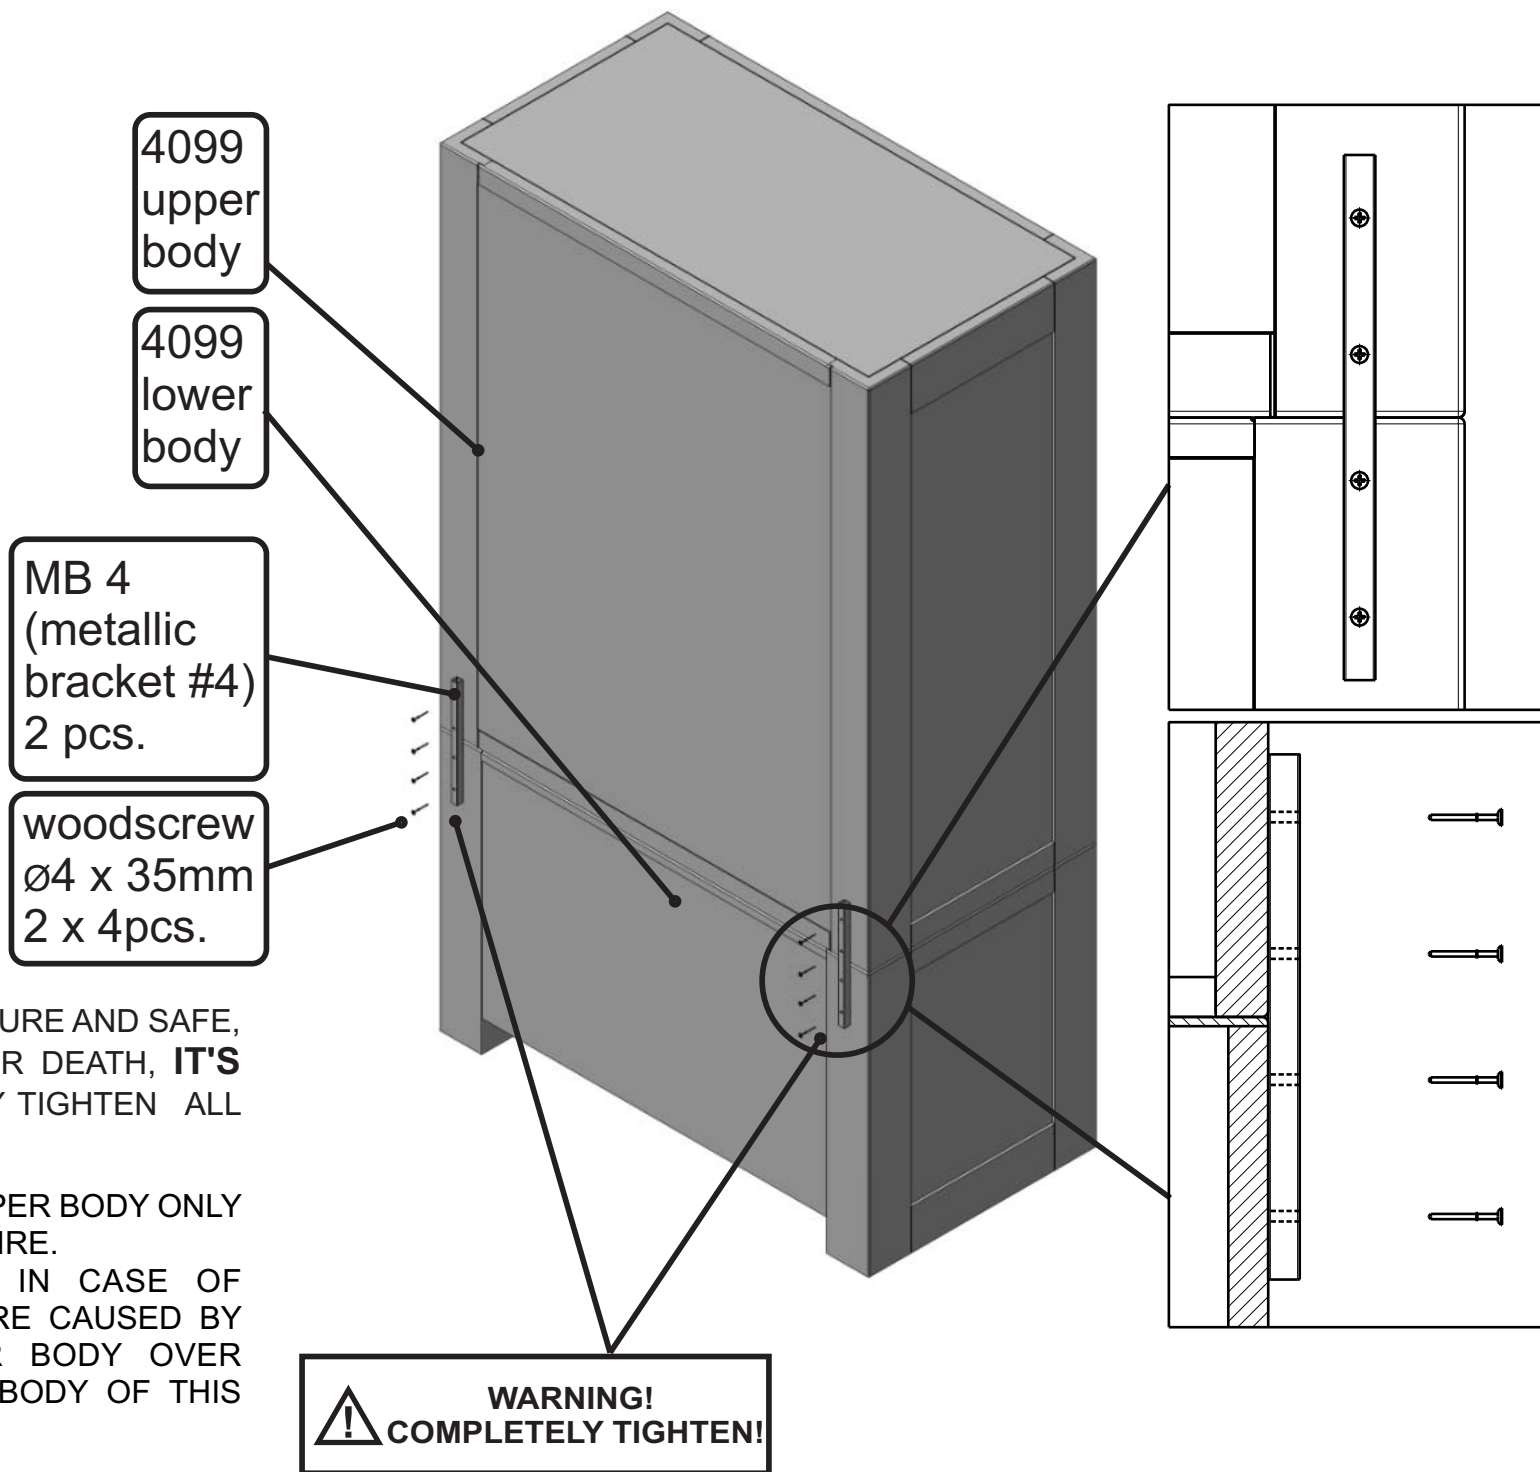

WARNING!
COMPLETELY TIGHTEN!