

BOOKLET.

VARY FROM WHAT IS PICTURED IN THE

INSTRUCTION SHEET



Phone (718) 478 5100, Fax (718) 478 5117 www.rominafurniture.com

Please locate and confirm that you have the following parts:

BR. bed rails = 2 SL. group of support slats assembled with textile ribbons = 2

one bag of hardware with the following:

1. wood screw (35mm - 1 3/8") = 8

2. wooden cap = 8


Required tools: Phillips screwdriver (not


supplied).

CAUTION: Do not use a power screwdriver which

can cause screws to break or strip

Note: The letters which identifies a part are the initials of the respective part name (such method is employed to facilitate parts recognition between the drawings and the parts list).

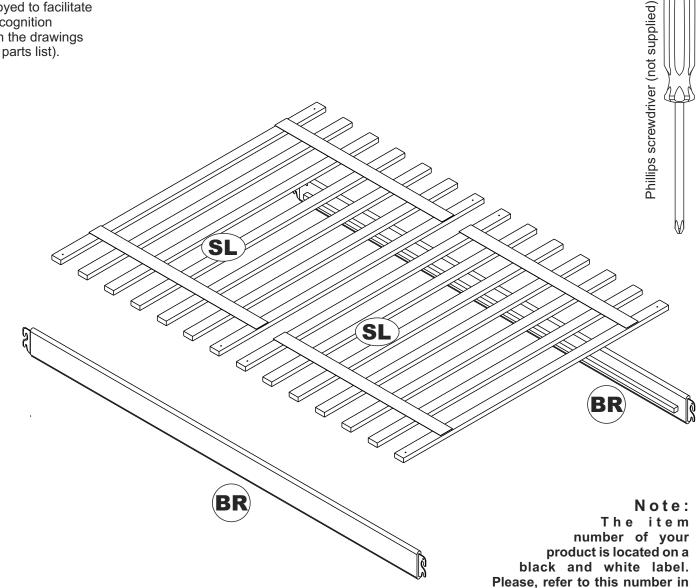



Be sure to **TIGHTEN COMPLETELY** the screws / bolts when you are asked to do so.

Thank you.

distributor.

the event that you need to call

ROMINA FURNITURE or your local

STEP 1 (Two adults are required to complete this step)

Completely disassemble the crib, taking care not to scratch the wood finish. (see STEPS 7 to 1 from "ASSEMBLY INSTRUCTIONS FOR YOUR 4501 CONVERTIBLE CRIB").

Keep the footboard and the headboard of the crib for the next step and carefully store the other resulted wooden pieces and hardware in a proper place, away from direct sunlight and moisture, taking care not to scratch the wood finish.

Remember: the resulted hardware is not a toy! You must keep this hardware in a proper place, away from your children.

STEP 2 (Two adults are required to complete this step)

Insert the metallic hooks attached at the ends of the bed rails into the slots provided in the headboard and footboard's posts, so the hooks will catch the inner metallic pins. Make sure that both bed rails are firmly attached to the headboard and the footboard (HB & FB).

Make sure that the wooden brackets attached to the bed rails faces towards the inside of the bed.

There are two possible height settings for the bed rails. When the rails are hooked in the highest position, you can use a Romina Furniture trundle bed (code BD) underneath your bed.

STEP 3 (Two adults are required to complete this step)

Place the support slats (SL) onto the wood brackets attached to the bed rails. Position the support slats evenly between the bed ends. Make sure you firmly attach the support slats to the wooden brackets using the all the eight wood screws (1) provided. Use a Phillips screwdriver (not supplied) to tighten the screws completely.

Use the wooden caps (2) to cover the eight holes from the upper part of headboard and footboard's posts.

After completing STEP 3, your bed should look like the one depicted on the first page of this instruction booklet.

Regular cleaning with mild soap on a soft cloth, followed by a clean damp cloth, then a dry cloth, will preserve the original luster and beauty of this fine finish of your Romina Furniture product.

Visit

www.rominakidsfurniture.com

for updates, special offers and more new designs.

