



this picture shows how your bed should look like after completing assembly

# ASSEMBLY INSTRUCTIONS FOR THE FULL SIZE BED OPTION OF YOUR 8501 CONVERTIBLE CRIB

(PLEASE REFER TO "ASSEMBLY INSTRUCTIONS FOR YOUR 8501 CONVERTIBLE CRIB")

**IMPORTANT:**  
**PLEASE, READ ALL INSTRUCTIONS**  
**BEFORE ASSEMBLING!**  
**PLEASE, SAVE INSTRUCTIONS FOR**  
**FUTURE USE**

NOTE: THE STYLE OF YOUR BED MAY VARY FROM WHAT IS PICTURED IN THE INSTRUCTION SHEET

**DO NOT THROW AWAY  
THIS INSTRUCTION  
BOOKLET.**



20 Corporation Row, Edison, NJ 08817  
Phone (718) 478 5100, Fax (718) 478 5117  
[www.rominakidsfurniture.com](http://www.rominakidsfurniture.com)

**Please locate and confirm that you have the following parts:**

BR. bed rails = 2


SL. group of support slats assembled with textile ribbons = 2

one bag of hardware with the following:

1. wood screw (1 3/8" or 35 mm) = 8
2. Allen bolts (3 1/8" or 80 mm) = 4
3. barrel nuts = 4
4. Allen wrench = 1

**Required tools:** Allen wrench (supplied), Phillips screwdriver (not supplied).


**CAUTION:** Do not use a power screwdriver which can cause screws to break or strip

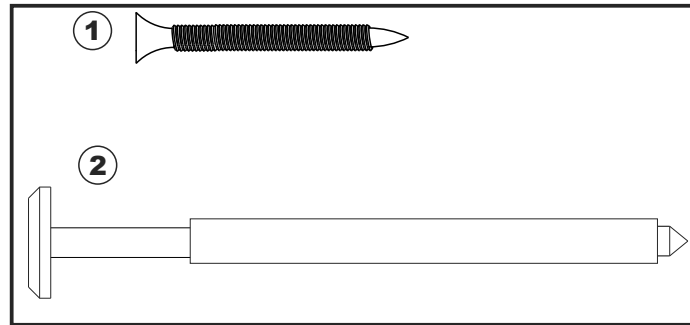


Be sure to **TIGHTEN COMPLETELY** the screws / bolts when you are asked to do so.



**Note:** The letters which identifies a part are the initials of the respective part name (such method is employed to facilitate parts recognition between the drawings and the parts list).

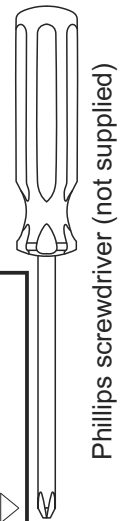

Phillips screwdriver (not supplied)

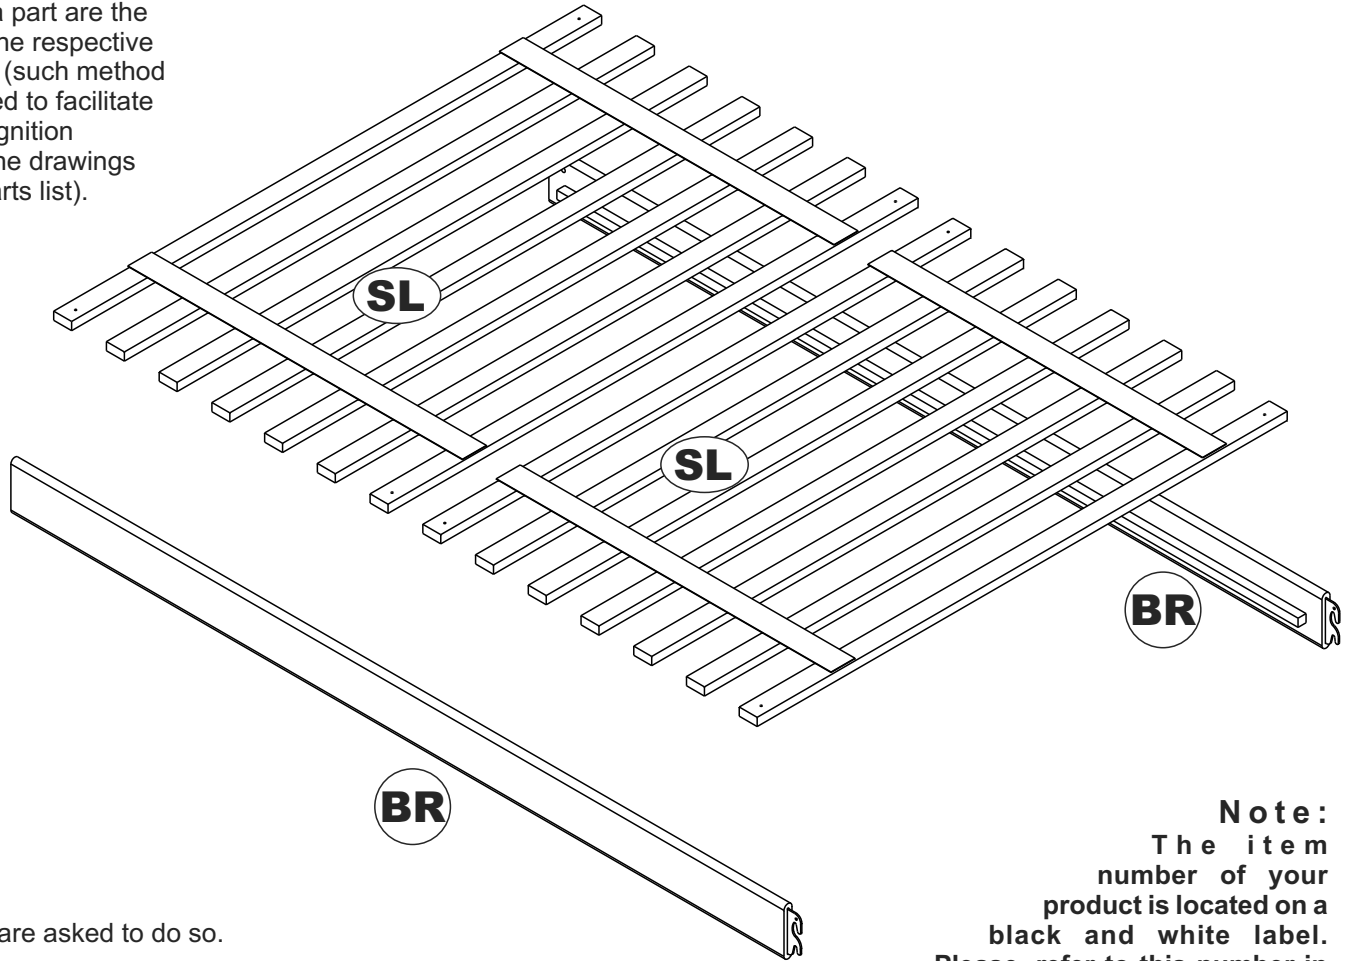

**Note:**  
The item number of your product is located on a black and white label. Please, refer to this number in the event that you need to call ROMINA FURNITURE or your local distributor.

**Thank you.**

## **STEP 1 (Two adults are required to complete this step)**

Take your crib and carefully place it on the floor with the headboard **(HB)** on top, taking care not to scratch its finish.

Using a Phillips screwdriver (not supplied) remove all the four smaller rounded head bolts **(6)** involved in mattress support fixing **(MS)** then remove the mattress support (see **STEP 4 & FIGURE 4** from “**ASSEMBLY INSTRUCTIONS FOR YOUR 8501 CONVERTIBLE CRIB**”).

Using the supplied Allen wrench, remove all the four smaller Allen bolts **(3)** used to fix the stabilizing bars **(SB)** then rotate the stabilizing bars to the inside of the crib (see **STEP 2 & FIGURE 2** from “**ASSEMBLY INSTRUCTIONS FOR YOUR 8501 CONVERTIBLE CRIB**”).

Look at the lower part of the left and right panels, near the stabilizing bars and locate the four cam fittings **(9)** used to fix the footboard and the headboard **(FB) & (HB)**. Using the supplied Allen wrench, rotate them counterclockwise so the little arrow of the cam will point to the footboard (for the front cams) or headboard (for the rear cams) (see **STEP 2 & FIGURE 2** from “**ASSEMBLY INSTRUCTIONS FOR YOUR 8501 CONVERTIBLE CRIB**”).

Remove all the eight bigger Allen bolts **(4)** used to fix the footboard and the headboard **(FB) & (HB)** (see **STEP 1 & 4** and **FIGURE 1 & 4** from “**ASSEMBLY INSTRUCTIONS FOR YOUR 8501 CONVERTIBLE CRIB**”).

Dissassemble the crib, taking care not to scratch the wood finish. Remove all the eight metallic dowels **(8)** found in the lower part of the headboard and footboard (see **STEP 1 & FIGURE 1** from “**ASSEMBLY INSTRUCTIONS FOR YOUR 8501 CONVERTIBLE CRIB**”).

Keep the footboard and the headboard of your crib for the next step and carefully store the other resulted pieces in a proper place, away from direct sunlight and moisture, taking care not to scratch the wood finish.

Regular cleaning with mild soap on a soft cloth, followed by a clean damp cloth, then a dry cloth, will preserve the original luster and beauty of this fine finish of your Romina Furniture product.

## **STEP 2 (Two adults are required to complete this step)**

Attach the bed rails **(BR)** to the headboard **(HB)** of the crib using all the four Allen bolts **(2)** and all the four barrel nuts **(3)**. Make sure that the wood brackets attached to the bed rails faces towards the inside of the bed.

Align the straight slots in the head of the barrel nuts horizontally, so the threads in the bolts will insert in the barrel nuts. You can adjust the position of the barrel nut with a flat head screwdriver (not supplied) or a coin.

Push the Allen bolts through the headboard and into the bed rail. Start the threads by hand to assure you don't strip the threads, then, use the supplied Allen wrench **(4)**.

Do not tighten the bolts completely at this step, you will be asked to do that later.

## **STEP 3**

Insert the metallic hooks attached at the ends of the bed rails into the slots provided in the footboard's legs, so the hooks will catch the inner metallic pins. Make sure that both bed rails are firmly attached to the footboard **(FB)**.

**Tighten completely** all the four Allen bolts.

## **STEP 4**



Place the support slats **(SL)** onto the wood brackets attached to the bed rails. Position the support slats evenly between the bed ends. Make sure you firmly attach the support slats to the wood brackets using all the eight wood screws **(1)** provided. Use a Phillips screwdriver (not supplied) to tighten the screws completely.

After completing **STEP 4**, your bed should look like the one depicted on the first page of this instruction booklet.

*Visit*

**[www.rominakidsfurniture.com](http://www.rominakidsfurniture.com)**

*for updates, special offers and more new designs.*

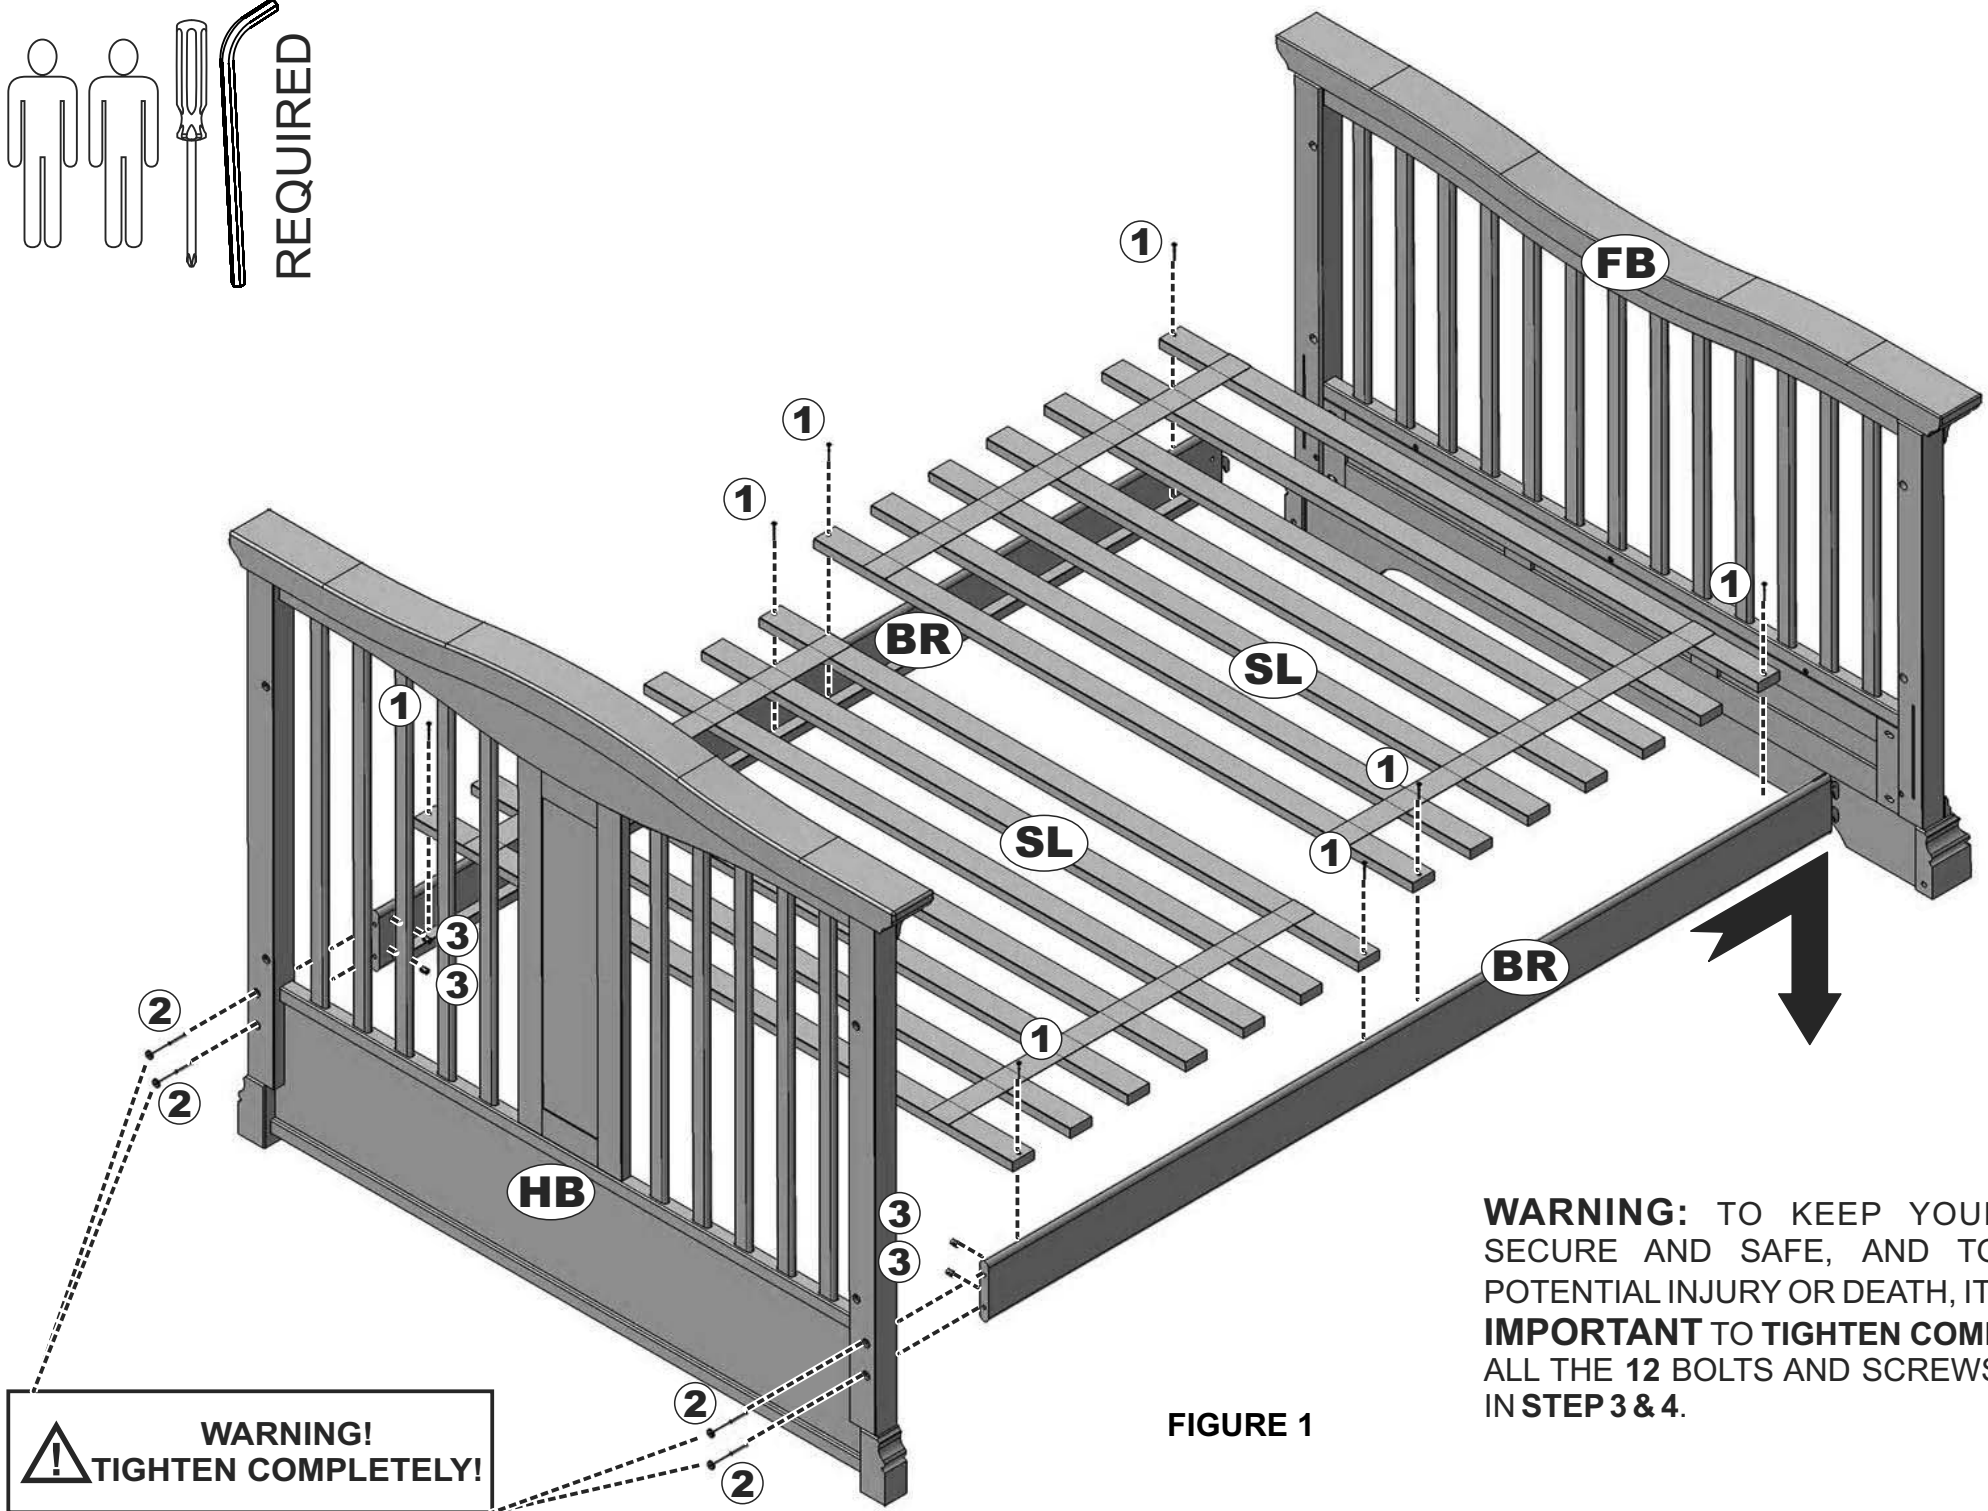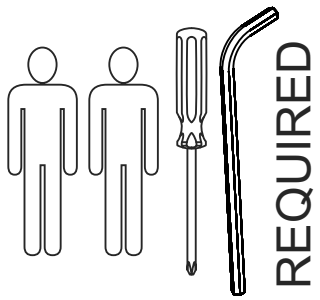

**WARNING:** TO KEEP YOUR BABY SECURE AND SAFE, AND TO AVOID POTENTIAL INJURY OR DEATH, IT'S **VERY IMPORTANT** TO TIGHTEN COMPLETELY ALL THE 12 BOLTS AND SCREWS LISTED IN STEP 3 & 4.