

THIS CRIB CONFORMS TO APPLICABLE
REGULATIONS PROMULGATED BY THE
CONSUMER PRODUCT SAFETY COMMISSION

ASSEMBLY INSTRUCTIONS

FOR THE TR 3510 TODDLER RAIL

(PLEASE REFER TO “ASSEMBLY INSTRUCTIONS FOR YOUR 3510s STATIONARY CRIB”
OR TO “ASSEMBLY INSTRUCTIONS FOR YOUR 3510 DROPSIDE CRIB”)

If you don't have your assembly manual anymore, you can download a copy
from the “Assembly manuals” section of our website www.rominakidsfurniture.com
or request one at contact@rominakidsfurniture.com.



WARNING: THE PROPER USE OF THIS CRIB IS IMPORTANT FOR YOUR BABY'S SAFETY. TO KEEP YOUR BABY SECURE AND SAFE, AND TO AVOID POTENTIAL INJURY OR DEATH, CAREFULLY READ AND FAMILIARIZE YOURSELF WITH ALL WARNINGS, CAUTIONS AND INSTRUCTIONS IN THE INSTRUCTION BOOKLET. KEEP THIS INSTRUCTION BOOKLET FOR FUTURE USE.

- ANY MATTRESS USED IN THIS CRIB MUST BE AT LEAST 27 1/4 IN BY 51 5/8 IN BY 4 IN, WITH A THICKNESS NOT EXCEEDING 6 IN.
- THE MINIMUM AGE OF YOUR CHILD SHALL NOT BE LESS THAN 15 MONTHS AND THE MAXIMUM WEIGHT SHALL NOT BE GREATER THAN 50LB.

IMPORTANT:

PLEASE, READ ALL INSTRUCTIONS BEFORE ASSEMBLING!

PLEASE, SAVE INSTRUCTIONS FOR FUTURE USE

DO NOT THROW THIS INSTRUCTION BOOKLET AWAY.

NOTE: THE STYLE OF YOUR CRIB OR OF YOUR MATTRESS SUPPORT MAY VARY FROM WHAT IS PICTURED IN THE INSTRUCTION SHEET

Romina®
Furniture

20 Corporation Row, Edison, NJ 08817
Phone (718) 478 5100, Fax (718) 478 5117
www.rominafurniture.com

FOR DROPSIDE TYPE OF 3510 (older version)
PLEASE REFER TO “ASSEMBLY INSTRUCTIONS FOR YOUR 3510 DROPSIDE CRIB”

STEP 1d (Two adults are required to complete this step)

Remove the mattress support (**M**) (see **STEP 5** for details) and adjust it to its lowest position (see **STEP 4** for details). Keep the resulted hardware for the next steps (**4** rounded head bolts **#3**).

Remove the dropside (**D**) and the stabilizer bar (**S**) located on the same side of the crib as the dropside (see **STEP 3b** for details). Carefully store the dropside in a proper place, away from direct sunlight and moisture, taking care not to scratch the wood finish. Keep the resulted hardware for the next steps (**2** Allen bolts **#1**).

Using a Phillips screwdriver (not supplied) you must completely remove all the factory mounted hardware involved in dropside moving, found on the end panels of your crib. You must remove:

- 2 metallic pins (from both end panels);
- 2 white plastic pins (from both end panels).

Remember: the resulted hardware is not a toy!
You must keep this hardware in a proper place, away from your children.

Loosen all the **6** Allen bolts (**#1**) which fixes the other stabilizer bar (**S**) and the fixed side (**F**) (see **STEP 2** for details).

STEP 2d (Two adults are required to complete this step)

Attach the toddler rail (**TR**) using **4** Allen bolts (**2**) and the Allen key (**1**) supplied (see **FIGURE 1d**). Start the threads by hand to assure you don't strip the threads, then, use the Allen key.

Attach the second stabilizer bar (**S**) using **2** Allen bolts (**#1**) and the Allen key (**1**) supplied.


Tighten completely all the 6 Allen bolts loosened at STEP 1d and all the 6 Allen bolts used at STEP 2d.

Attach the mattress support (**M**) (previously adjusted to its lowest position) using **4** rounded head bolts (**#3**).

Tighten completely all the 4 bolts (#3) which fixes the mattress support (M) to the stabilizer bars (S) and all the 4 bolts & nuts (#2 + #6) which fixes the metallic brackets of the mattress support to the metallic frame.

After completing **STEP 2d**, your crib should look like the one depicted on the first page of this instruction booklet.

HARDWARE BOX CONTENT

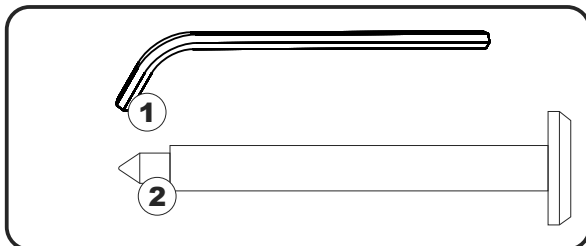

Please locate and confirm that you have the following parts:


TR. toddler rail = 1

one bag of hardware with the following:

1. Allen wrench = 1
2. Allen bolt (50mm - 1 15/16") = 4

Required tools: Allen wrench (supplied), Phillips screwdriver (not included), flat screwdriver (not included).

CAUTION: Do not use a power screwdriver which can cause screws to break or strip



Phillips screwdriver (not included)

FOR STATIONARY TYPE OF 3510 (newer version)
PLEASE REFER TO “ASSEMBLY INSTRUCTIONS FOR YOUR 3510s STATIONARY CRIB”

STEP 1s (Two adults are required to complete this step)

Remove the mattress support (**M**) (see **STEP 5** for details) and adjust it to its lowest position (see **STEP 4** for details). Keep the resulted hardware for the next steps (**4** rounded head bolts **#3** and **4** washers **#9**).

Unmount one of the stationary side panels and the stabilizer bar (**S**) located on the same side of the crib (see **STEP 3** for details). Keep the resulted hardware for the next steps (**6** Allen bolts **#1** and **6** washers **#8**).

Carefully store the resulted stationary side in a proper place, away from direct sunlight and moisture, taking care not to scratch the wood finish.

Loosen all the **6** Allen bolts (**#1**) which fixes the other stabilizer bar (**S**) and the fixed side (**F**) (see **STEP 2** for details).

STEP 2s (Two adults are required to complete this step)

Attach the toddler rail (**TR**) using **4** Allen bolts and washers (**#1 + #8**) and the Allen key (**1**) supplied (see **FIGURE 1s**). Start the threads by hand to assure you don't strip the threads, then, use the Allen key.

Attach the second stabilizer bar (**S**) using **2** Allen bolts and washers (**#1 + #8**) and the Allen key (**1**) supplied.


Tighten completely all the 6 Allen bolts loosened at STEP 1s and all the 6 Allen bolts used at STEP 2s.

Attach the mattress support (**M**) (previously adjusted to its lowest position) using **4** rounded head bolts and washers (**#3 + #9**).

Tighten completely all the 4 bolts (#3) which fixes the mattress support (M) to the stabilizer bars (S) and all the 4 bolts & nuts (#2 + #6) which fixes the metallic brackets of the mattress support to the metallic frame.

After completing **STEP 2s**, your crib should look like the one depicted on the first page of this instruction booklet.

HARDWARE BOX CONTENT

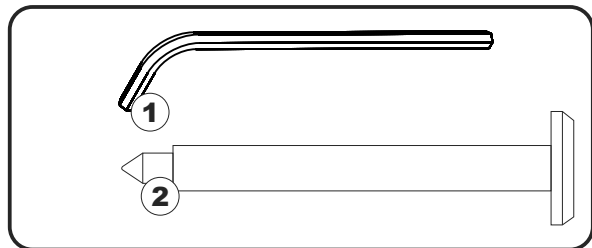

Please locate and confirm that you have the following parts:


TR. toddler rail = 1

one bag of hardware with the following:

1. Allen wrench = 1
2. Allen bolt (50mm - 1 15/16") = 4

Required tools: Allen wrench (supplied), Phillips screwdriver (not included), flat screwdriver (not included).

CAUTION: Do not use a power screwdriver which can cause screws to break or strip



Phillips screwdriver (not included)



FIGURE 1d



FIGURE 1s

GENERAL FURNITURE CARE TIPS

- Wood, like any natural material is likely to present variations of grain and texture which will result in slight color variations or richness in the finish. These differences make each Romina furniture item as beautiful and unique as you and your baby are.
- To preserve the initial appearance and functionality of your furniture, it is recommended that all furniture items be used in accordance with their intended design.
- Special water-based finishes are used to make this furniture safe for your baby. These finishes may be more delicate than those used on adult furniture thus requiring careful maintenance.
- Constant rubbing or mechanical interaction with sharp/hard objects such as belt buckles, jeans' zippers or buttons will likely damage the finish on your furniture. When placing or retrieving items onto the furniture, always set them down and pick them up, do not "slide" them. Items placed onto the horizontal surfaces must be moved/rotated to prevent discoloration in the finish.
- Exposure to extreme variations of environmental conditions such as humidity and temperature can affect the finish quality due to wood sudden expansion or shrinkage. It is recommended that the room temperature be maintained in between 65 and 75 degrees Fahrenheit and a relative humidity of 35 – 40 %. Do not place items which are too hot or too cold directly onto the finished surfaces!
- Use caution when using a humidifier or vaporizer. Excessive moisture is harmful to the furniture causing the finish to peel and the wood to warp.
- Wipe up spills promptly. If water or other liquids stay in contact with the furniture for a long period of time, they can cause the finish to turn white or discolor. Alcohol or solvent containing substances or materials will permanently damage the finish.
- In general, furniture should not be placed in front or too close to air-conditioning outlets, fireplaces, heaters or humidifiers. Direct sunlight and ultraviolet rays will cause colors to fade, affect the luster and smoothness of the finish and in most cases may cause hairline cracks in the finish. White finishes will yellow naturally over time; exposure to direct sunlight will accelerate this natural process. Please note that all wood essences will darken over time along with the natural aging process which is not considered to be a quality defect.
- To clean the furniture, use a damp cloth immediately followed by wiping with a dry cloth. Do not allow water to stay in contact with the finish as it will damage the finish.
- If you need to put your furniture into storage for any period of time, avoid placing it in damp basements or hot attics. Air flow around and under the furniture should be allowed. Do not place furniture too close to walls, do not stack anything on it and do not cover it entirely.
- When using a vinyl changing pad or similar plastic accessories, make sure to use a fabric felt underneath. Certain plastics have ingredients that can react with and damage the finish. It is recommended to rotate the changing pad's position frequently to avoid finish discoloration.

Regular cleaning with mild soap on a soft cloth, followed by a clean damp cloth, then a dry cloth, will preserve the original luster and beauty of this fine finish of your Romina Furniture product.



Thank you for being one of our distinguished clients.

Romina[®] *Team*
Furniture

Visit
www.rominakidsfurniture.com
for updates, special offers and more new designs.